
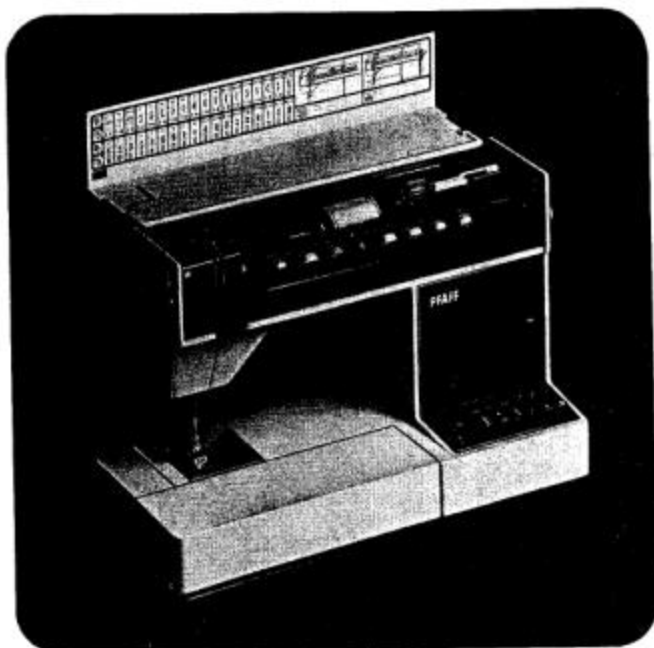
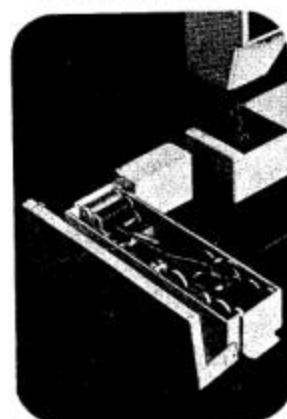


**PFAFF**

tipmatic  
1025·1027  
Instruction  
Book

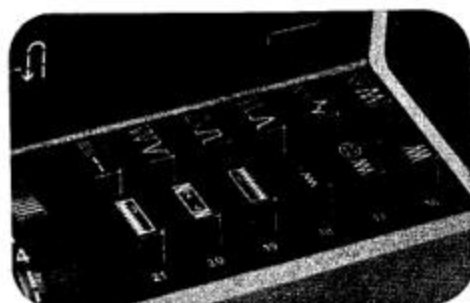

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

[www.lockmachine.info](http://www.lockmachine.info)

## Parts of your sewing machine

- 30 Carrying handle
- 31 Hinged top cover
- 32 Hand wheel
- 33 Stop motion knob
- 34 Master switch
- 35 Finger-tip controls
- 36 Stitch length control
- 37 Swing-out sewing arm with accessory compartment
- 38 Needle plate
- 39 Sewing foot holder with sewing foot
- 40 Needle holder with screw
- 41 Needle thread tension
- 42 Presser bar lifter
- 43 Presser bar with thread cutter
- 44 Reverse-feed control
- 45 Stitch chart (Model 1027)
- 46 Accessory box with accessory compartment underneath
- 47 Bobbin winder
- 48 Free arm cover (enclosing sewing hook and drop-feed control)
- 49 Free arm
- 50 Thread guide
- 51 Threading slots
- 52 Take-up lever
- 53 Spool pin with unreeling discs
- 54 Threading slot for bobbin winding
- 55 Bobbin tension stud (bobbin winding)
- 56 Bobbin rack
- 57 Space for entering phone number of customer service

## Some safety rules

- a) Be careful to avoid finger injuries by the needle when sewing.
- b) Make sure you unplug the power cord whenever you want to change the needle, sewing foot, bobbin or needle plate, when you want to clean and oil the machine or have to interrupt sewing and leave the machine for a while.
- c) Be sure to use only a 15-watt light bulb in the sewing lamp.

## IMPORTANT!

### Valid for United Kingdom only!

The wires in this mains lead are coloured in accordance with the following code: Blue: Neutral, Brown: Live.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

### Please note:

When 13 amperes plug is used a 3 amperes fuse has to be fitted.

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83



[www.lockmachine.info](http://www.lockmachine.info)



Fold out this page

Contents	Page
Removing the carrying case cover	1
Opening the top cover	1
Removing and opening the swing-out arm	1
Accessory box and accessory compartment	2
Electrical connection	3
Foot control	3
Placing spool of thread on pin	4
Upper threading	4
Threading the needle	5
Disengaging the sewing mechanism	5
Bobbin winding	6
Removing bobbin case and bobbin	7
Inserting the bobbin	7
Inserting the bobbin case	8
Drawing up the bobbin thread	8
Presser bar lifter	9
Thread cutter	9
Thread tensions	10
Regulating the stitch length	11
Reverse sewing	11
Finger-tip controls 1027	12
Finger-tip controls 1025	13
Selecting utility stitches	14
Selecting stretch stitches	14
Utility- and stretch-stitch combinations 1027	15
Selecting the needle position for straight stitching	15
Dropping the machine feed	16
Changing the needle	16
Changing the sewing foot	17
Special sewing feet	18
Buttonhole settings	18
Sewing buttonholes	19
Sewing feet	20
Changing the light bulb	21
Cleaning and oiling	21
Trouble shooting	22

www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
www.lockmachine.info

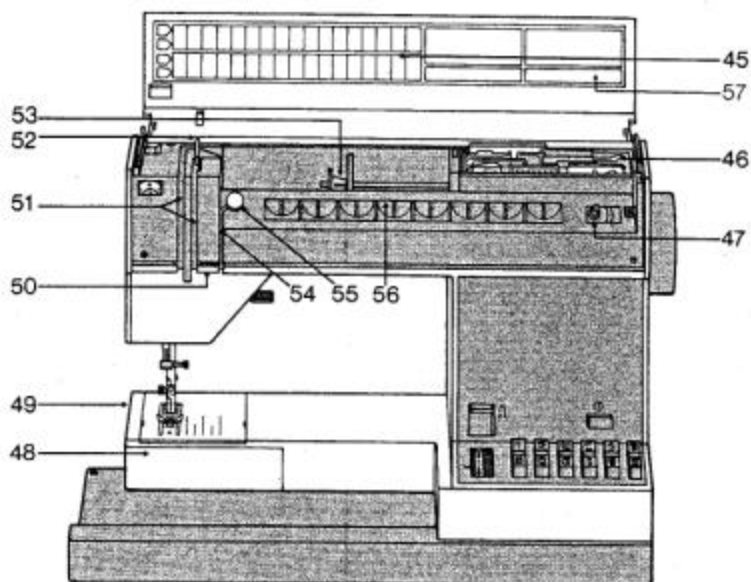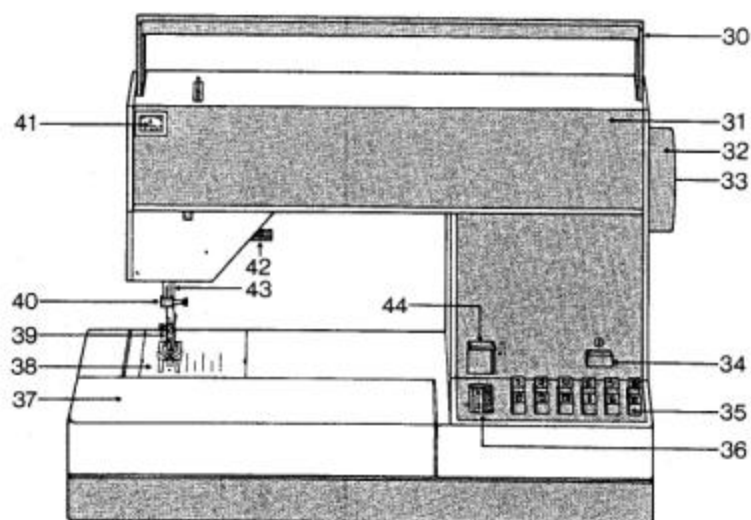

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
 specialisten sinds 1929  
 Lange Bisschopsstraat 9  
 7411 KG Deventer  
 Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)

**Removing the carrying case cover**






To lift off the carrying case cover, fold the handle to the rear, as indicated by an arrow. Then lift the cover off.

**Opening the hinged top cover**

Also fold the handle toward the rear. Swing cover 31 backwards. On Model 1027 a stitch chart is found on the inside of this cover (A).

**Removing and opening the swing-out arm**

Reach under the swing-out arm with your left hand (B), swing it out toward the left (C) and lift it out (D). Open its lid (E) to accommodate thread and accessories.

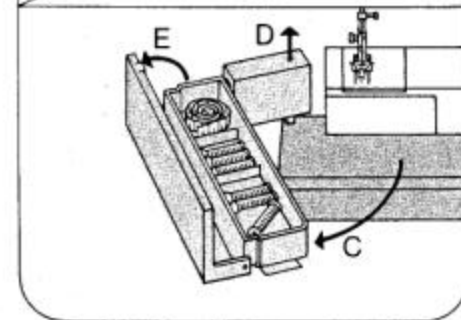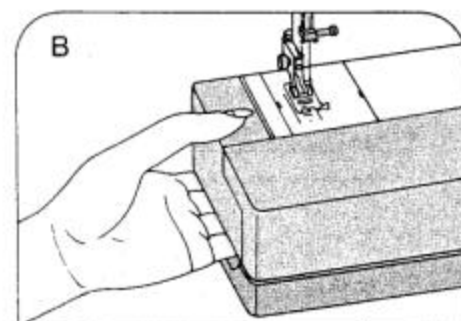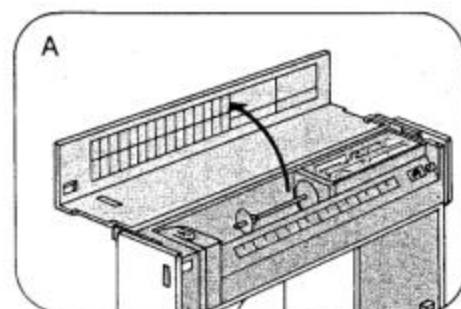
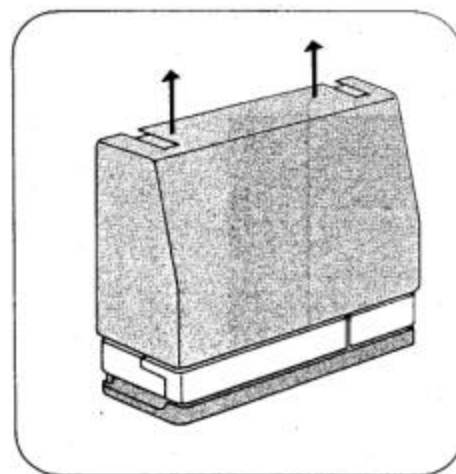
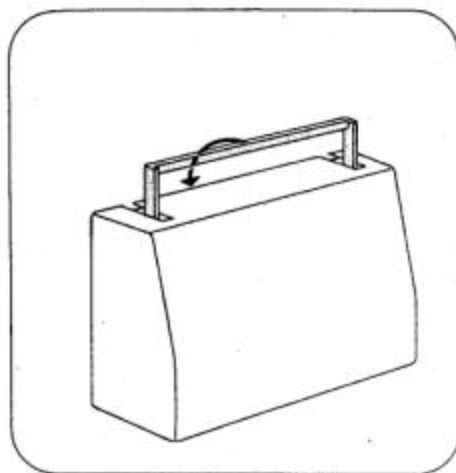


www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
www.lockmachine.info

### Accessory box and accessory compartment

Tilt up the front of accessory box 46 and lift it out (A). There is an additional accessory compartment (B) underneath.

III. C shows how the snap-on sewing feet, the second spool holder and the seam ripper fit into the box.

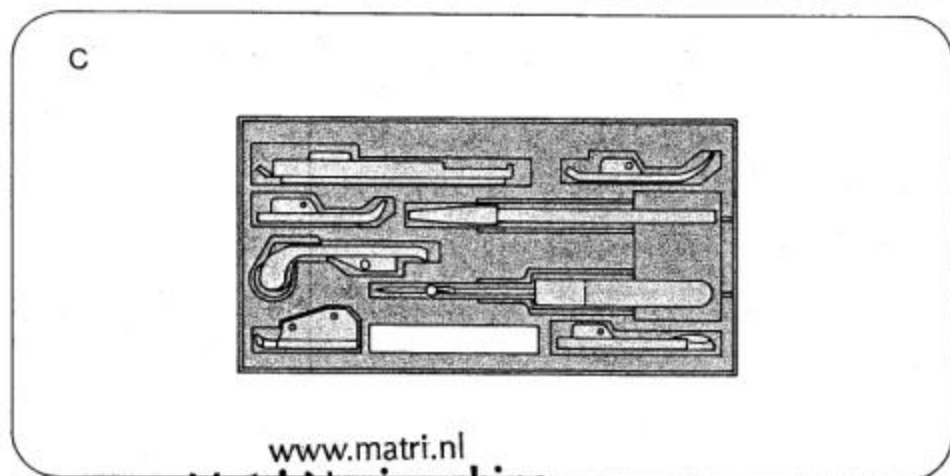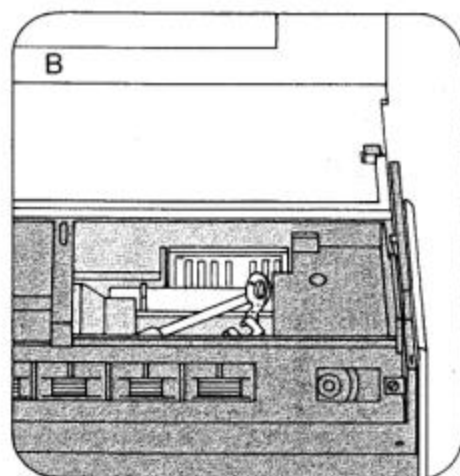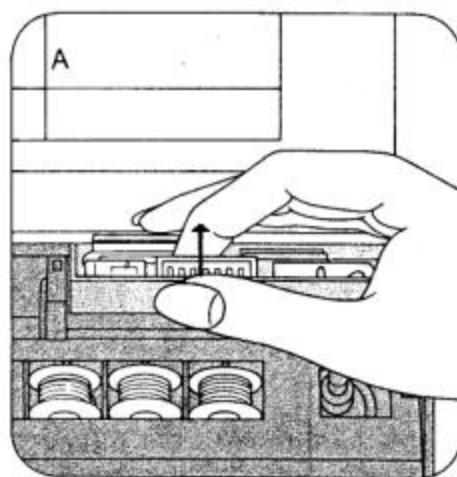

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)




#### Electrical connection

Take the foot control out of the machine. Push plug B into the machine socket and plug C into the wall outlet. Press master switch 34. Your machine is now ready for sewing.

When you put the machine away, the foot control is placed in the machine again as shown in the illustration (A).

#### Foot control

Place the foot control under the table. Press down the pedal, and the machine starts sewing. The more the pedal is depressed, the faster the machine runs.

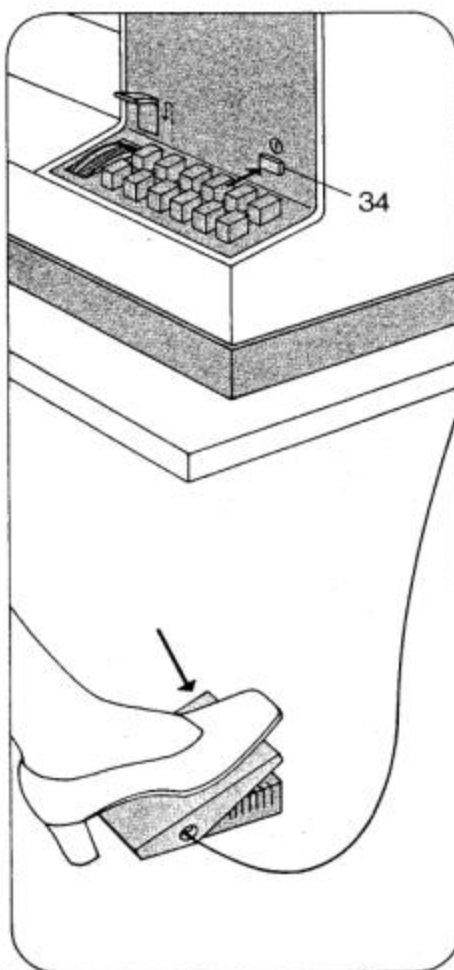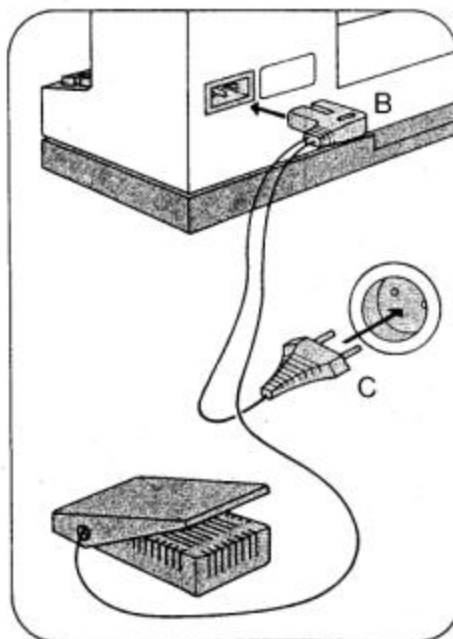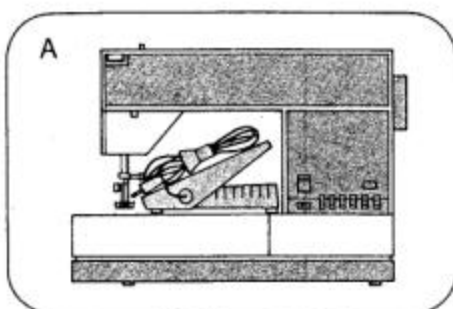

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

[www.lockmachine.info](http://www.lockmachine.info)

### Placing spool of thread on pin

#### A Small spools of thread:

Push unreeling disc D on the spool holder in front of the spool of thread.

#### B Large spools of thread:

Push unreeling discs D and E on the spool holder in front of the spool of thread, as shown in the drawing.

#### C Second spool holder:





This is contained in the accessory box and is used for bobbin winding and twin-needle sewing. Insert the spool holder in hole F and place a spool of thread on it.

### Upper threading

Raise the sewing foot.

Pull the thread from the spool and draw it into slot A (to the left of guide C), from below into slot B and take-up lever 52. Then draw it back into slot B, into thread guide 50 and into the right thread guide D on the needle holder.

For two-needle sewing, draw one thread into slot A to the left of guide C, and draw the other to the right of guide C. One of the threads is then pulled into the right thread guide, the other into the left.

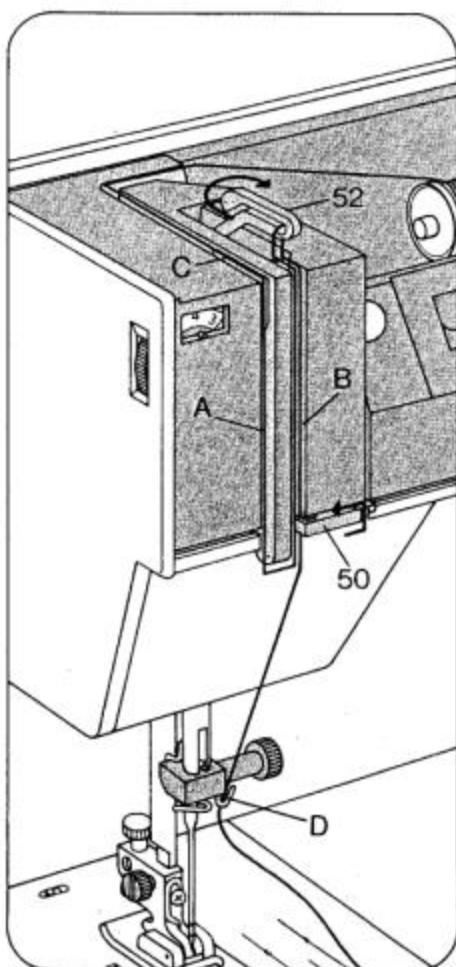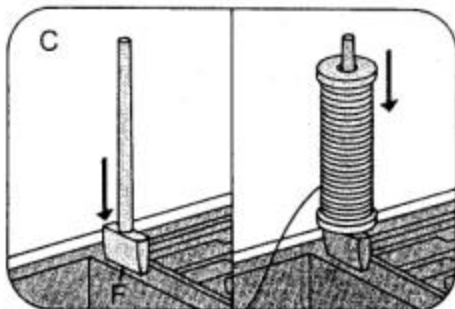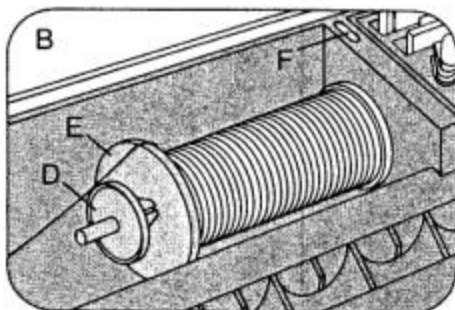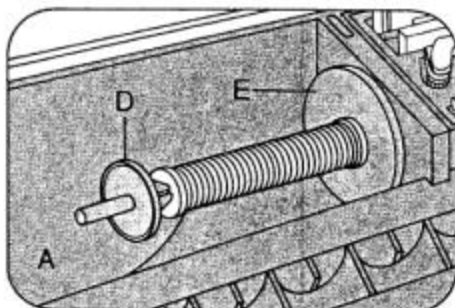





**Threading the needle**

Thread the needle from front to back.

**Disengaging the sewing mechanism**

Before you start winding the bobbin, disengage the sewing mechanism. Hold the hand wheel steady and turn the stop motion knob toward you. After bobbin winding, tighten the knob again by turning it away from you.

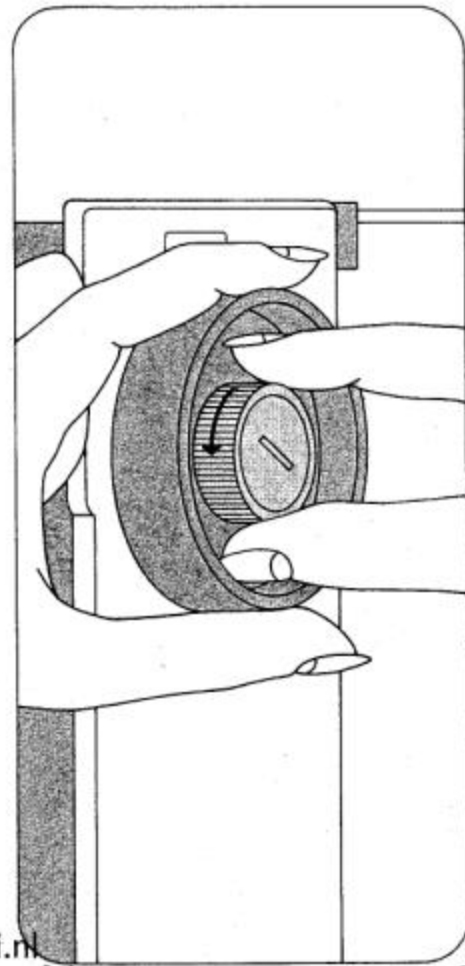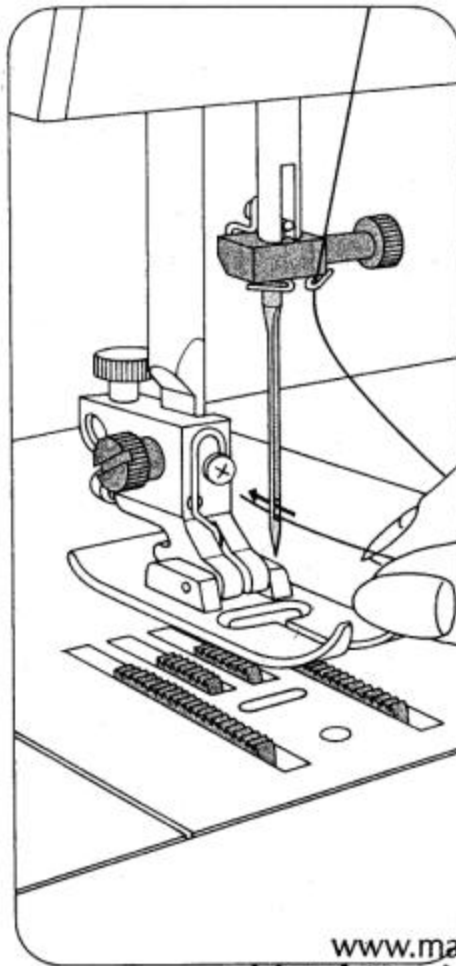

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83



[www.lockmachine.info](http://www.lockmachine.info)

### Winding the bobbin from a second spool (A)

Disengage the sewing mechanism. Insert the spool holder and place a spool of thread on it. Place a bobbin on spindle 47 so that pin C enters slot D. Pull the thread from the spool, lead it around bobbin tension stud 55, wind it around the bobbin a few times and push the bobbin toward the right to start the winder. When the bobbin is full push it toward the left and take it out. Then re-engage the sewing mechanism. Leave the top cover open during bobbin winding.

### Winding the bobbin through the needle eye (B)

Raise the sewing foot and bring the needle to its highest point. Disengage the sewing mechanism. Place a bobbin on spindle 47 so that pin C enters slot D. Draw the needle thread under the sewing foot, up and into slot 54, and from above around bobbin tension stud 55. Then wind a few turns of thread on the bobbin. Push the bobbin toward the right to start the bobbin winder. Push the full bobbin toward the left and take it out. Re-engage the sewing mechanism.

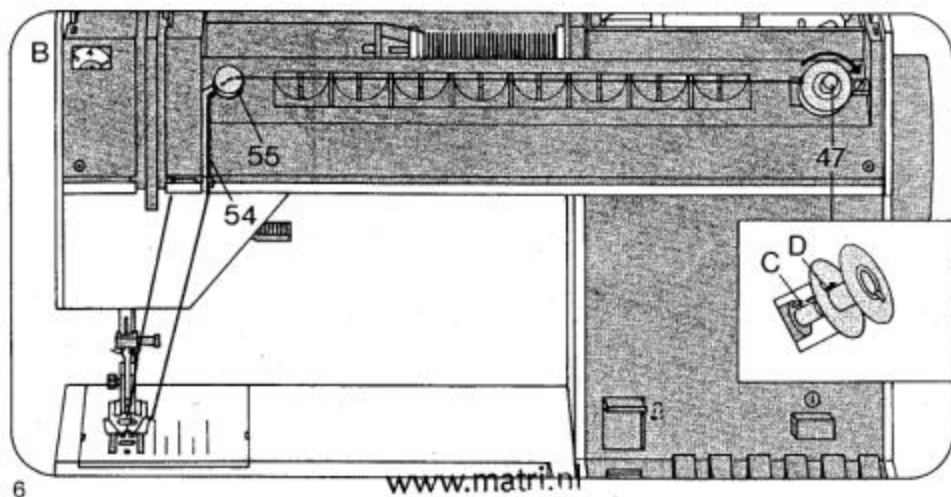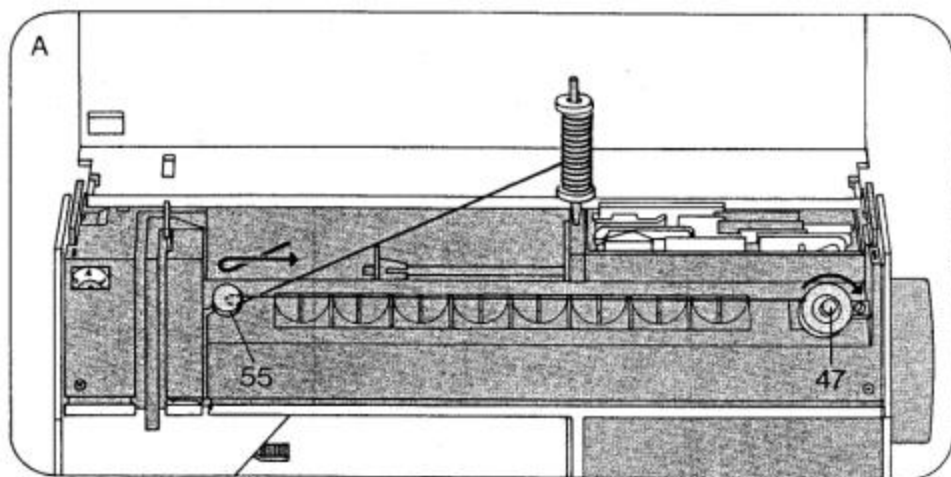





6

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**  
specialisten sinds 1929  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)

**Removing bobbin case and bobbin**  
Open free arm cover 48. Pull out latch K, then lift out the bobbin case, release the latch and take out the bobbin. The bobbin cannot fall out as long as you keep latch K pulled out.

**Inserting the bobbin**  
Insert the filled bobbin into the bobbin case so that the thread unreels toward the back (A). Then draw the thread into slot B and under the spring into eye C.

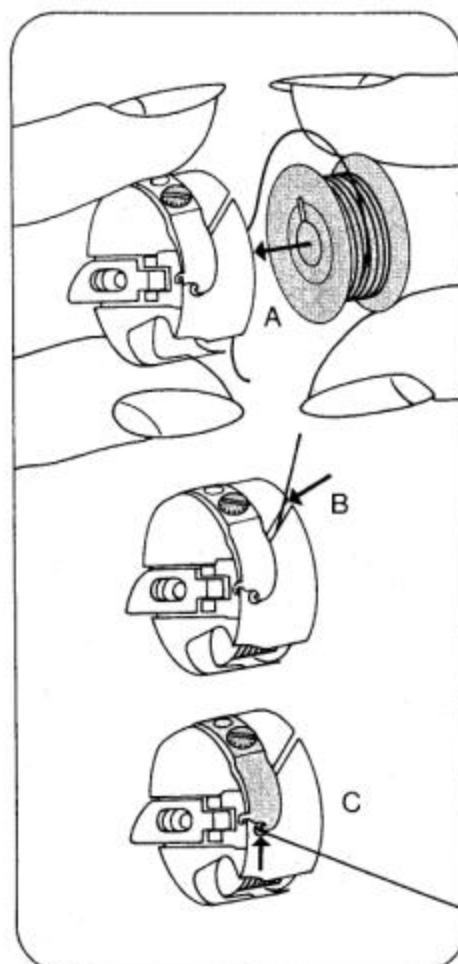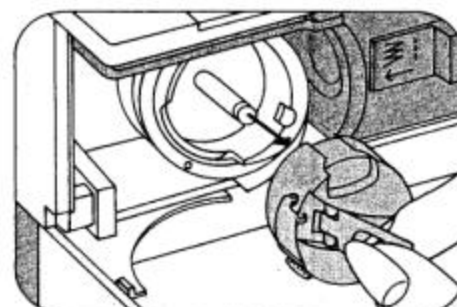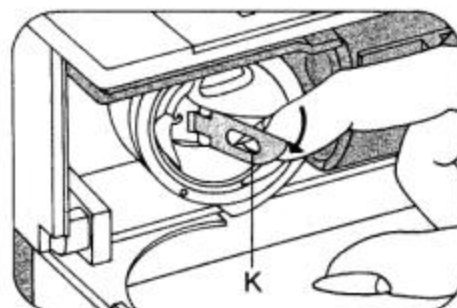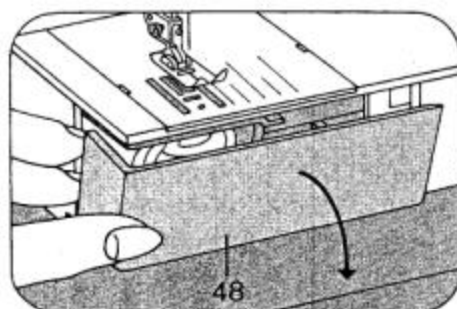

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83



[www.lockmachine.info](http://www.lockmachine.info)

#### Inserting the bobbin case

Pull out latch K and push the bobbin case onto stud B, making sure slot A is up. Release the latch and lightly press against the bobbin case to make sure it has snapped into place.

#### Drawing up the bobbin thread

Hold the needle thread a little taut. Turn hand wheel 32 toward you until the needle moves down and up again and the take-up lever is up. Pull the bobbin thread out of the needle hole and lay both threads toward the left and back under the sewing foot.

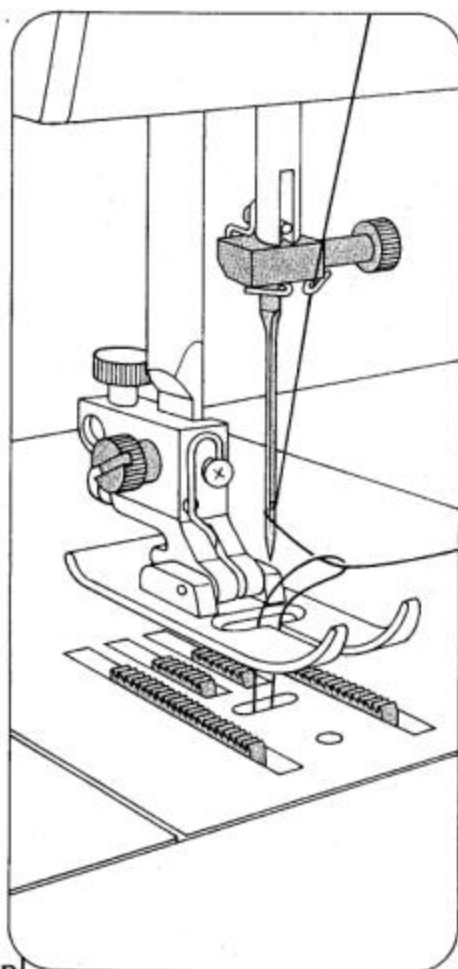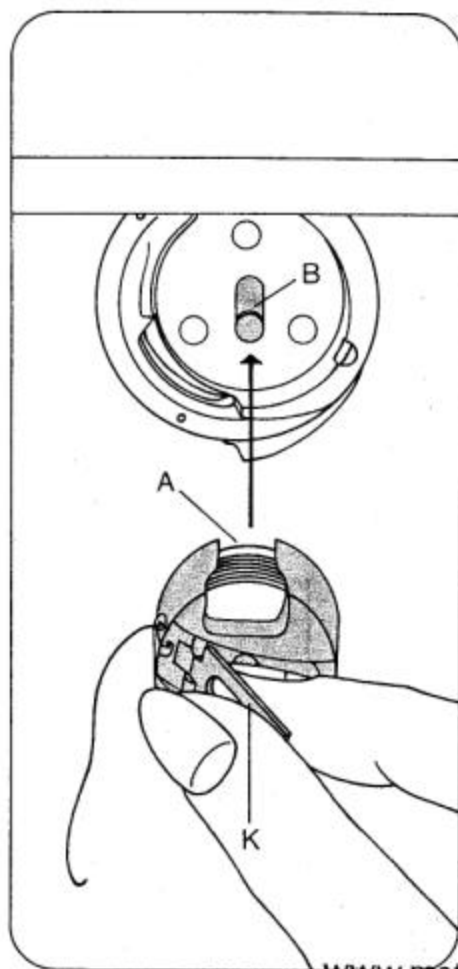

8

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**  
specialisten sinds 1929  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)



### Presser bar lifter

Lever 42 has three positions:

- A = The sewing foot is raised. (Before you remove the work, turn the hand wheel toward you to raise the needle and take-up lever 52.)
- B = The sewing foot is raised further for inserting extra-thick materials.
- C = The sewing foot is lowered for sewing.

### Thread cutter

The thread cutter is an oblique slot located at the back of the presser bar. Raise the sewing foot. Pull the work out of the machine toward the back. Draw the threads into the cutter slot and pull them downwards to cut them.

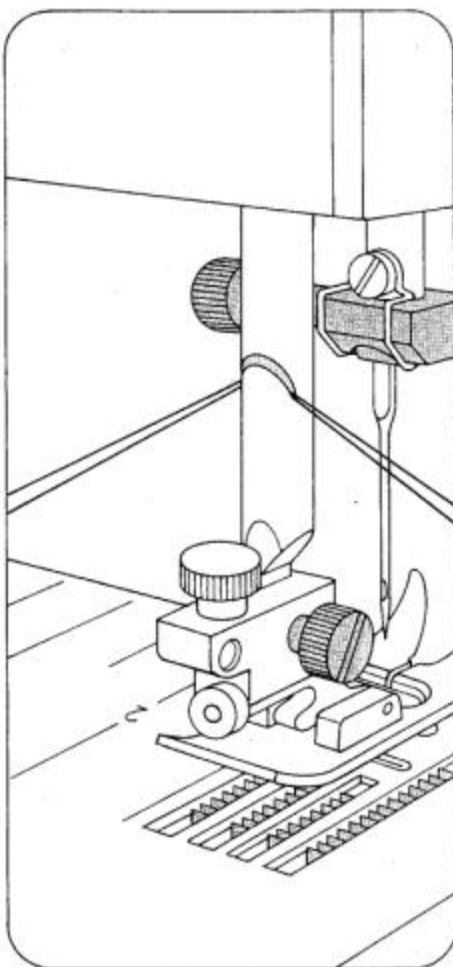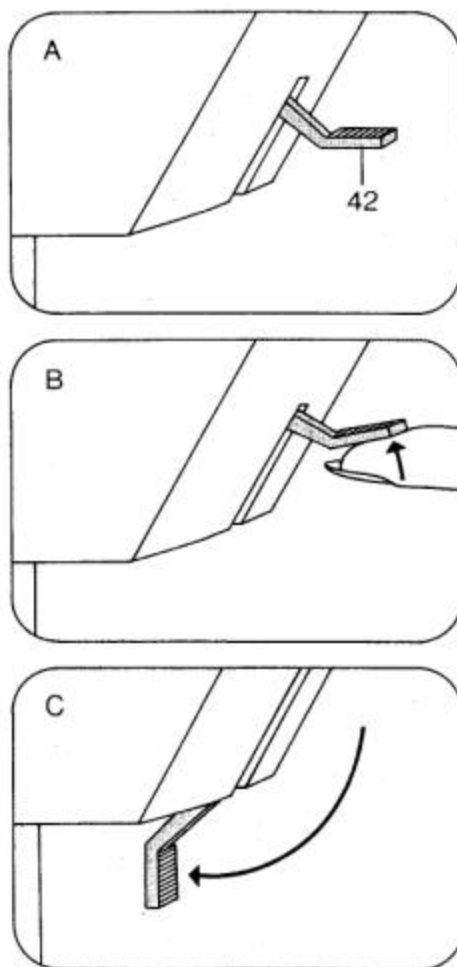

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

[www.lockmachine.info](http://www.lockmachine.info)

### Upper tension (41)





A = Setting mark. The normal tension setting is in the white range between 3 and 5. The higher the number, the tighter the tension.

### Lower tension

- B = Regulating screw.  
Turn it left for a looser tension, or right for a tighter tension.
- C = Both tensions are correct
- D = Upper tension too loose or lower tension too tight.
- E = Lower tension too loose or upper tension too tight.

### The correct lower tension

Let the bobbin case with a full bobbin hang down freely by the thread. It must not slide down by its own weight, but should gradually move downwards when you jerk your hand upwards lightly.

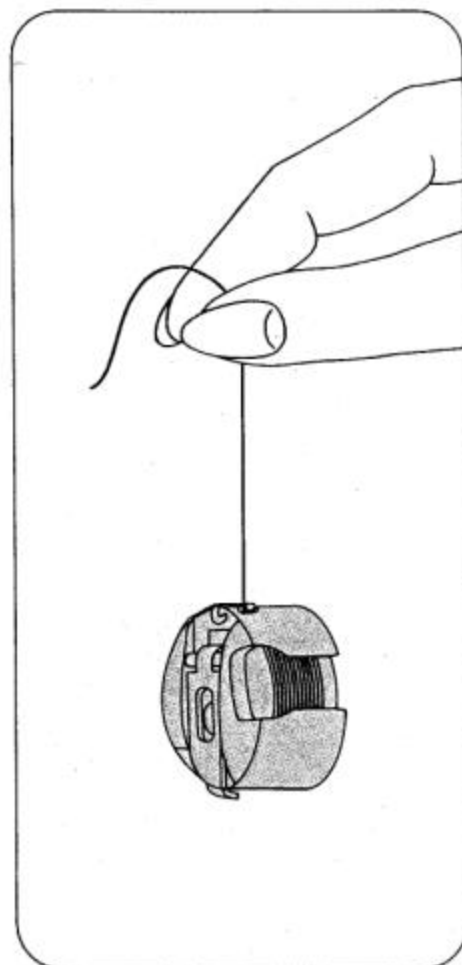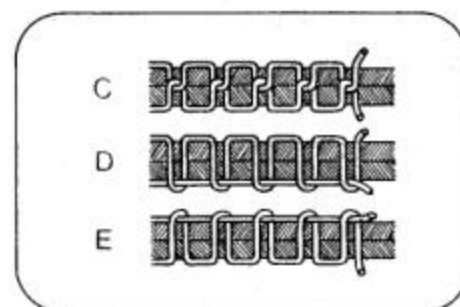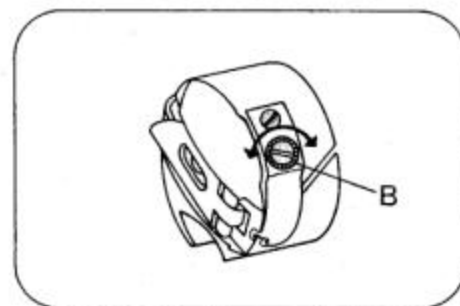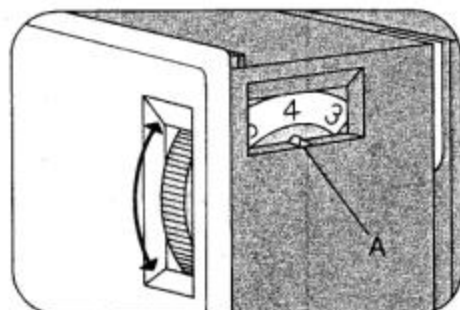

### Regulating the stitch length

Turn the control so that the number indicating the stitch length chosen is opposite mark A.

Stitch length range:




Model 1025: 0-4

Model 1027: 0-6

III. B shows how to set the stitch length control for sewing stretch stitches (red stitch symbols on push buttons).

### Reverse sewing

Push button 44. As long as you keep this button depressed, the machine sews backwards.

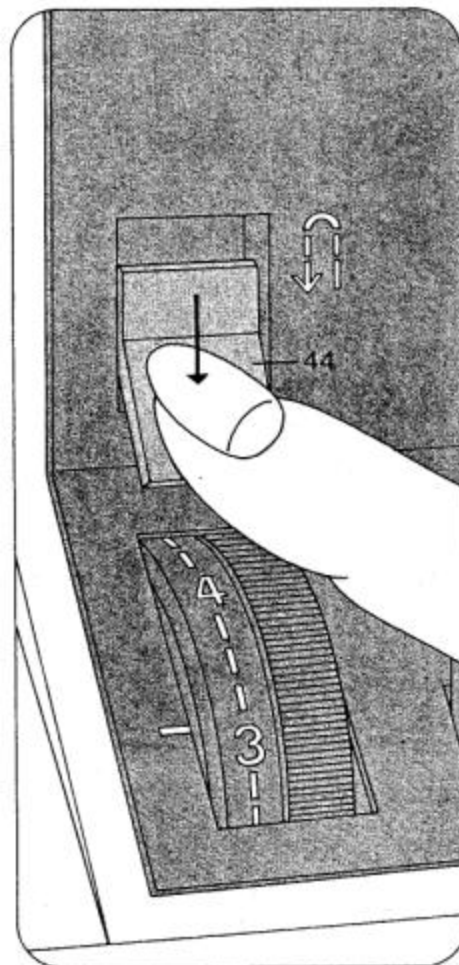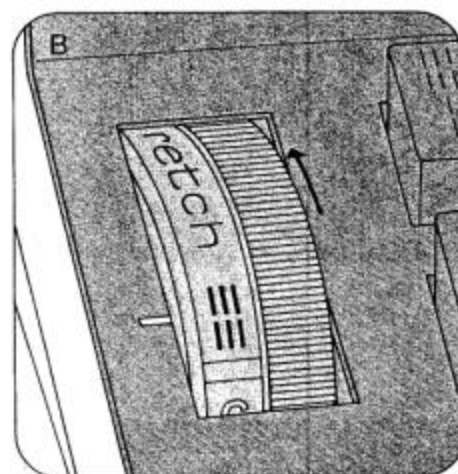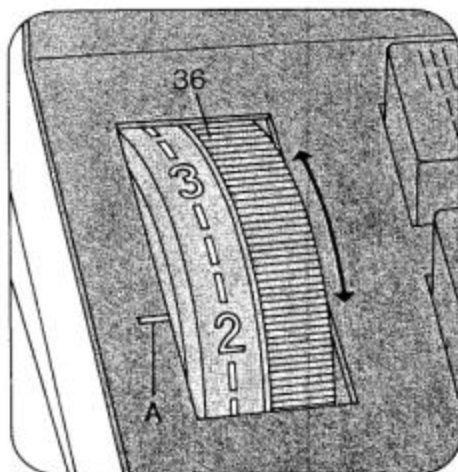

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)


# Finger-tip controls of model 1027

- 10 Elastic triple straight stitch  
Straight stitch
- 11 Pullover stitch  
Blindstitch
- 12 Closed overlock stitch  
Joining stitch
- 13 Overlock stitch  
Shell-edge stitch
- 14 Feather stitch  
Elastic decorative stitch
- 15 Honeycomb stitch  
Elastic stitch

- 16 Elastic triple zigzag stitch, 5 mm  
5-mm zigzag stitch
- 17 Elastic triple zigzag stitch, 3.5 mm  
3.5-mm zigzag stitch
- 18 Elastic triple zigzag stitch, 2 mm  
2-mm zigzag stitch
- 19, 20, 21: Buttons for buttonholing  
Button 20 is also used as clearing button for  
releasing the pushed buttons.

## Elastic blindstitch

Push buttons 15 and 16.

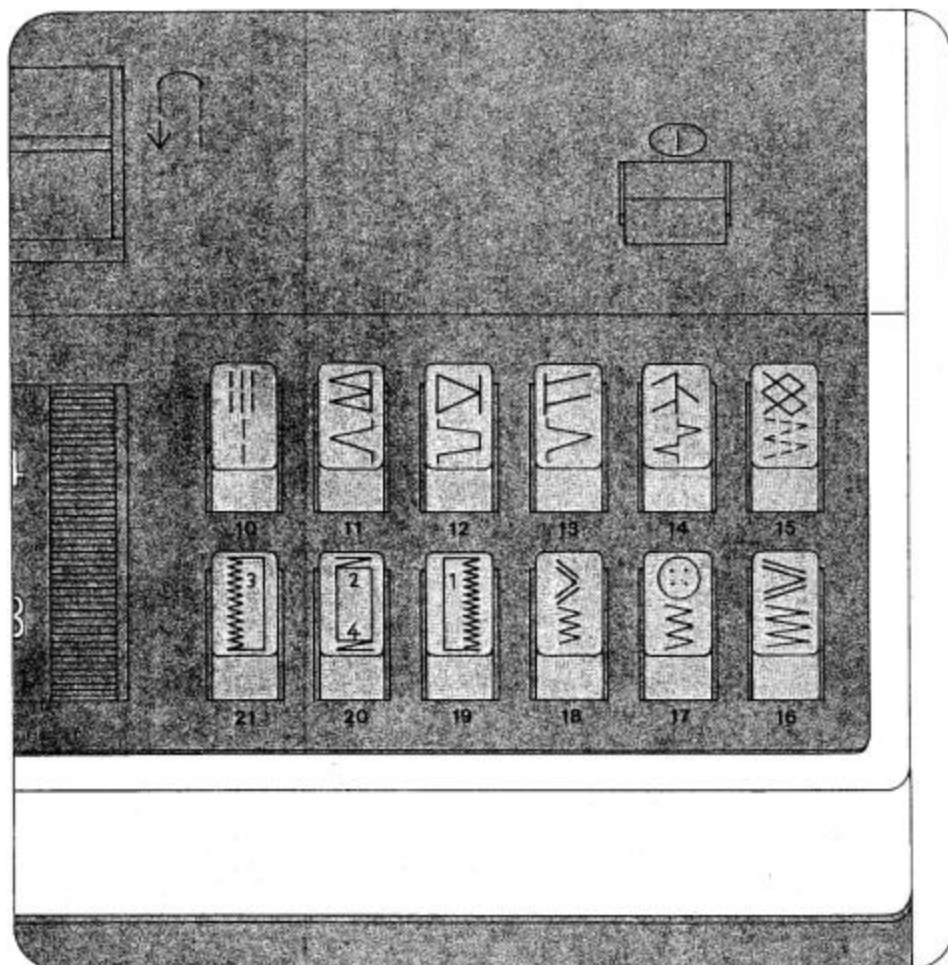

12

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)



### Finger-tip controls of model 1025


- 10 Elastic triple straight stitch  
Straight stitch
- 13 Overlock stitch  
Shell-edge stitch
- 14 Feather stitch  
Elastic decorative stitch
- 15 Honeycomb stitch  
Elastic stitch
- 16 Elastic triple zigzag stitch, 5 mm  
5-mm zigzag stitch
- 17 Elastic triple zigzag stitch, 3.5 mm  
3.5-mm zigzag stitch

- 18 Elastic triple zigzag stitch, 2 mm  
2-mm zigzag stitch

19, 20, 21: Buttons for buttonholing  
Button 20 is also used as clearing button for releasing the pushed buttons.

### Elastic blindstitch

Push buttons 15 and 16.



[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**


*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

[www.lockmachine.info](http://www.lockmachine.info)

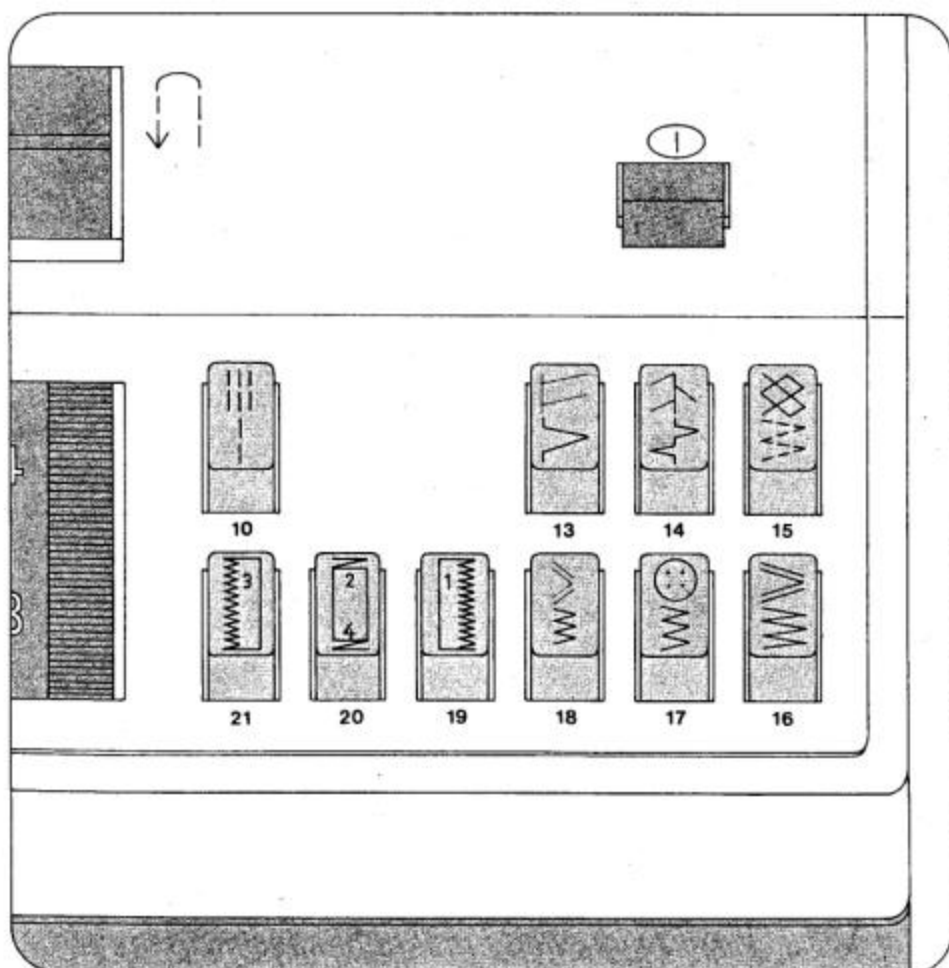

### Selecting utility stitches

(white symbols)





Push the desired button and turn the stitch length control to the number indicating the desired stitch length (1–6 on model 1027, or 1–4 on model 1025).

### Selecting stretch stitches

(red symbols)

Push the desired button and turn the stitch length control as far as it will go (red symbol).

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)

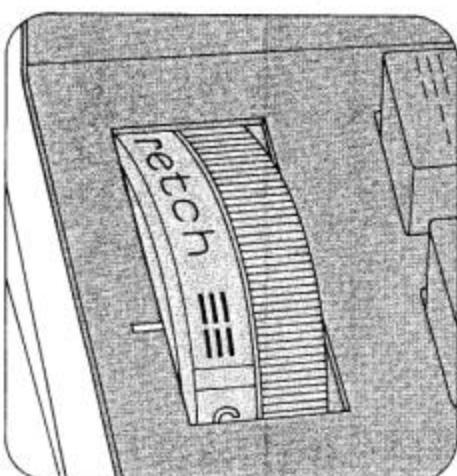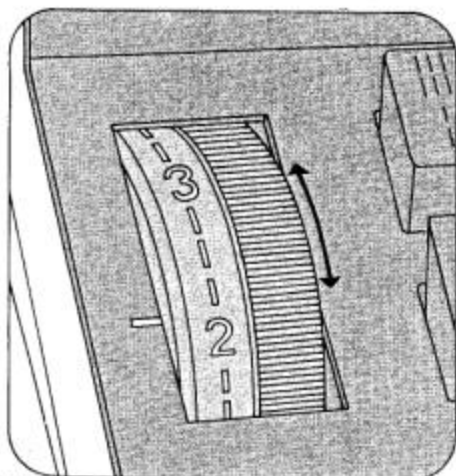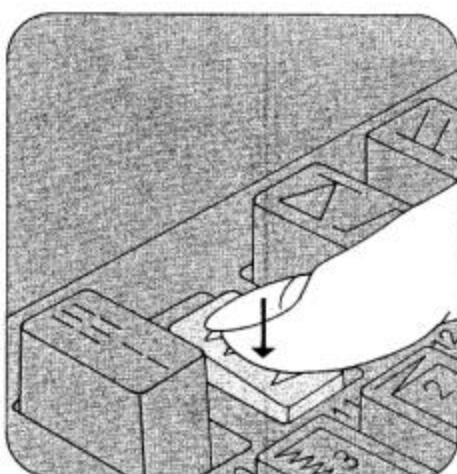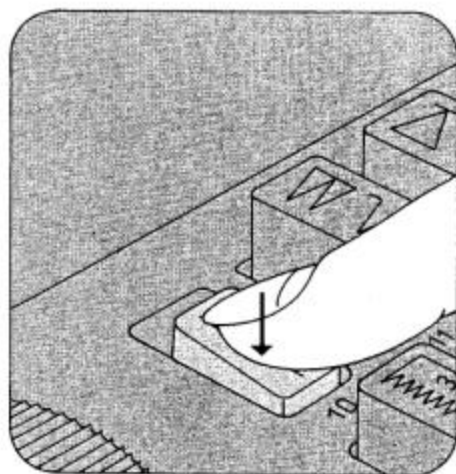





**Utility- and stretch-stitch combinations,  
model 1027**

The various stitch combinations are shown in the chart on the inside of the hinged top cover. For example, if you want to sew an elastic blindstitch, push buttons 15 and 16, select a stitch length between 1 and 4. This stitch can also be sewn with model 1025.

**Selecting the needle position for  
straight stitching**

Left needle position: push button 20  
Central needle position: push button 10  
Right needle position (model 1027): push buttons 11 and 12.



www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
www.lockmachine.info

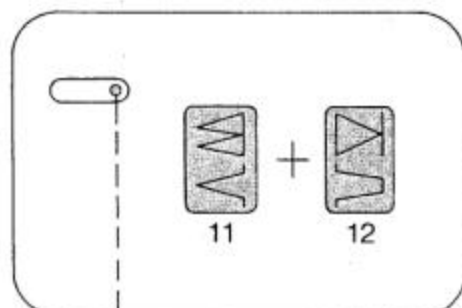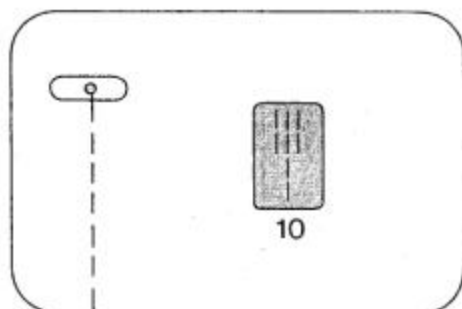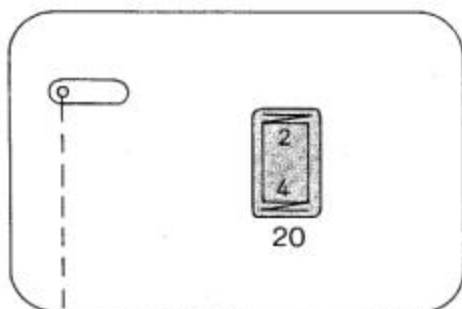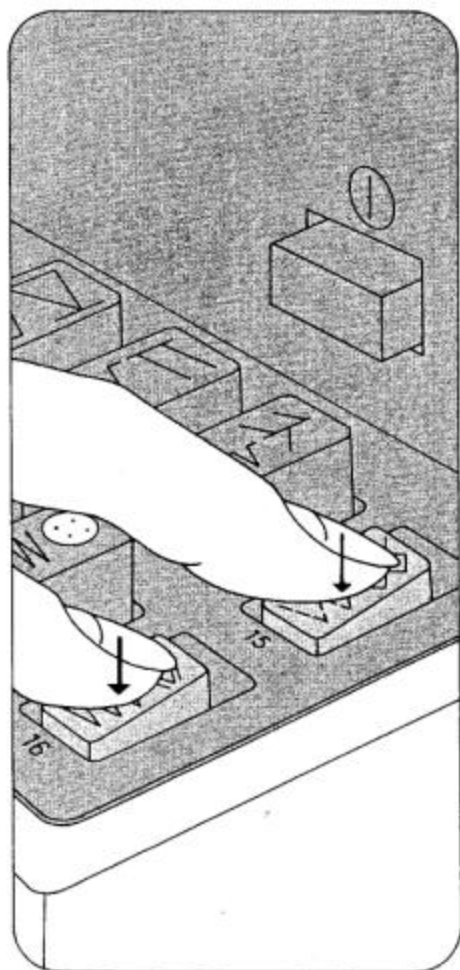

### Dropping the machine feed

Open free arm cover 48. Push the drop-feed control toward B. The feed dog is dropped (for embroidering, darning, etc.)

For sewing, push the drop-feed control toward A.

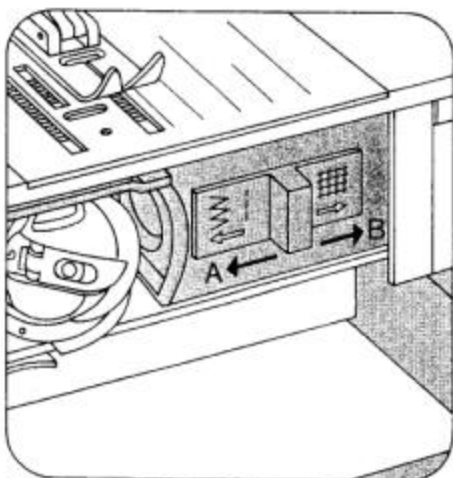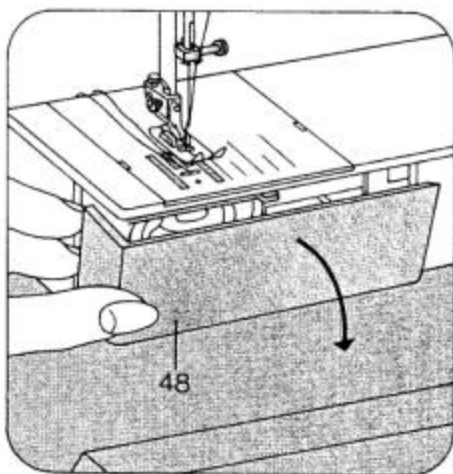


### Changing the needle

Raise the needle bar. Then hold the needle, loosen screw A and pull the needle out downwards. Insert a new System

130/705 H needle (with the flat side of its shank facing toward the back) and push it up as far as it will go. Then tighten screw A.

Twin needles with a needle distance of 1.4 mm may be used for zigzag and utility-stitch sewing.

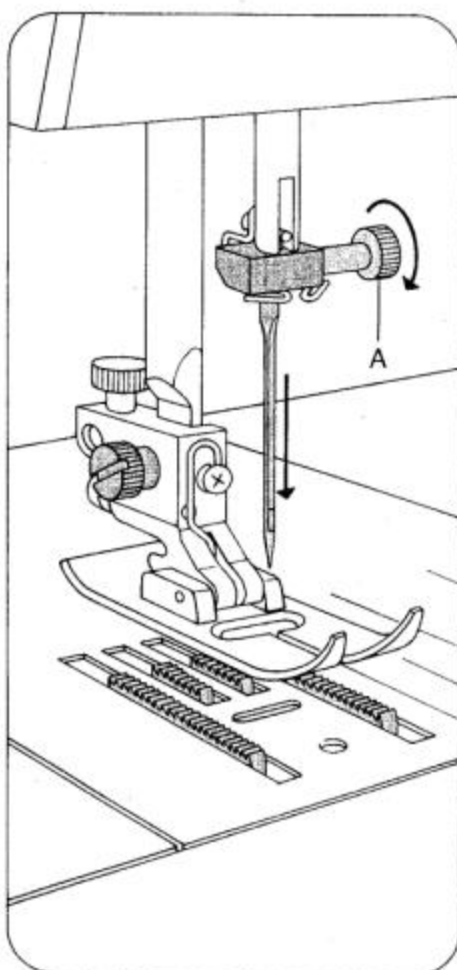

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**

*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer





Tel.: 0570 - 61 63 83

[www.lockmachine.info](http://www.lockmachine.info)

### Changing the sewing foot

To release the sewing foot push the red button A. When attaching a sewing foot make sure stud B enters slot C. Place the sewing foot under the sewing foot holder and hold it in place with your left hand.

Lower presser bar lifter 42 and at the same time reposition the sewing foot so that stud B fits in slot C. Hole E and screw D are used for attaching an edge guide. Screw F serves to secure the sewing foot holder on the presser bar.

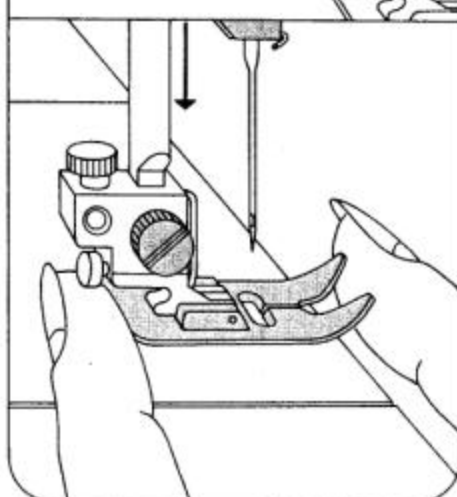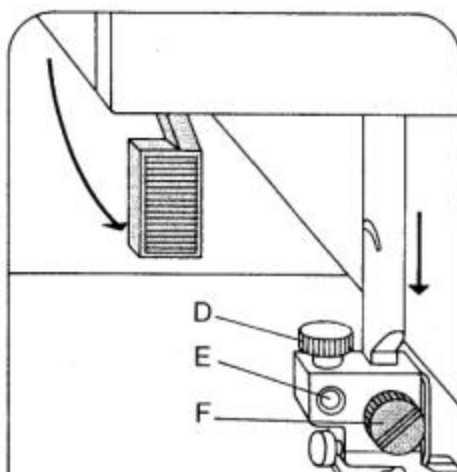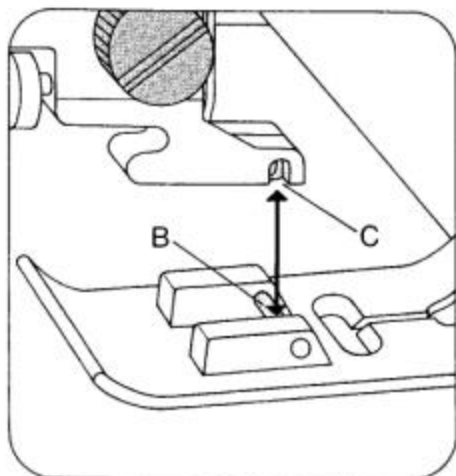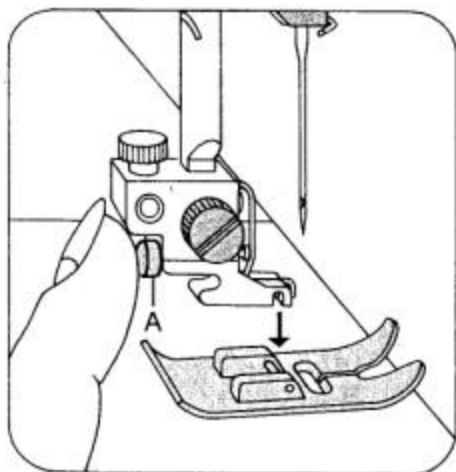

www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
www.lockmachine.info

### Special sewing feet

#### A Blindstitch foot

Blindstitch guide E is adjusted by turning screw D.

#### B Zipper foot

First insert its rear pin into groove F, then push its front pin into groove G. The zipper foot can be adjusted sideways for stitching along the right or left zipper chain.

#### C Darning foot

Remove the sewing foot holder and secure the darning foot in position with screw H.

### Buttonhole settings

Push button 19 (A). Regulate the stitch density in the buttonhole range of the stitch length control (B). Attach the buttonhole foot. Insert the filler cord as follows (C): Place it over the rear lug of the foot, pull it taut and clamp it in front lug D. As you sew, arrow E moves along scale F. This serves to determine the buttonhole length.

[www.matri.nl](http://www.matri.nl)

**Matri Naaimachine**







*specialisten sinds 1929*

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

[www.lockmachine.info](http://www.lockmachine.info)

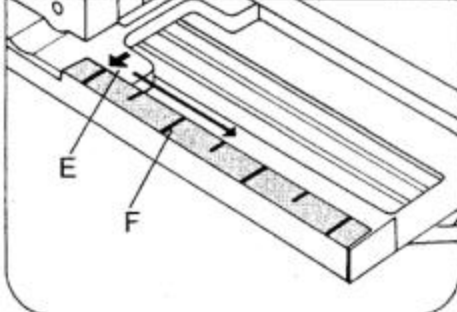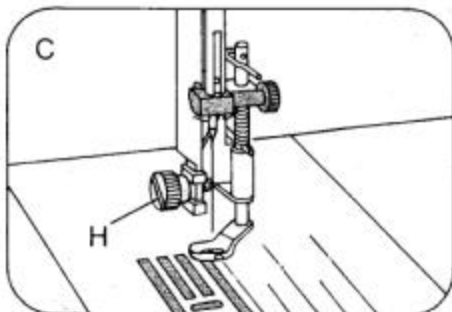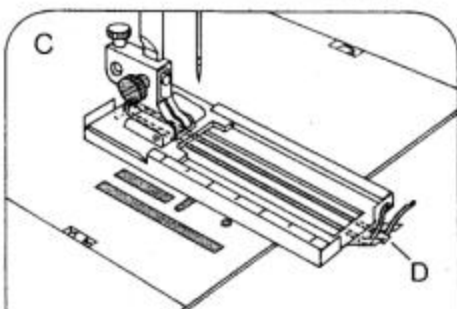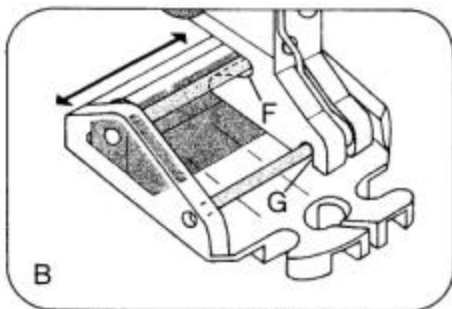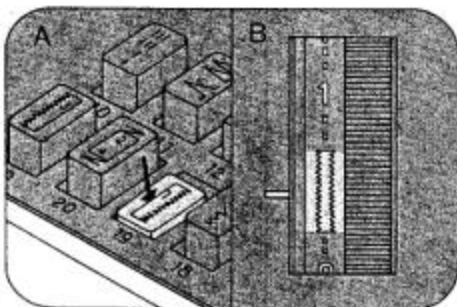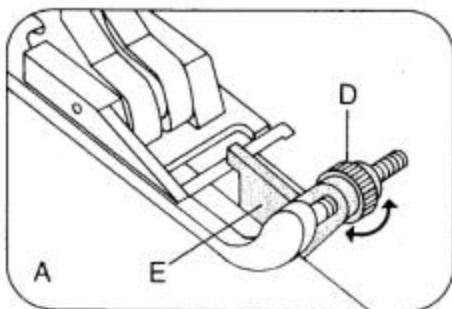



### Sewing buttonholes

Pull the bottom of the buttonhole foot forward as far as it will go.

- 1 Sew first buttonhole seam. Turn hand wheel forward you to raise the needle.
- 2 Push button 20 and keep it depressed until the machine has sewn 4 to 6 bartacking stitches. Raise the needle. Then release the button.
- 3 Push button 21. Sew the second buttonhole seam the same length as the first. Raise the needle.

- 4 Push button 20 and keep it depressed until the machine has sewn 4 to 6 bartacking stitches. Raise the needle. Then release the button.
- 5 Sew a few tying stitches. Turn the hand wheel toward you until the take-up lever is up. Remove the fabric, pull the filler cord taut and trim.
- 6 Cut the buttonhole open.

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)

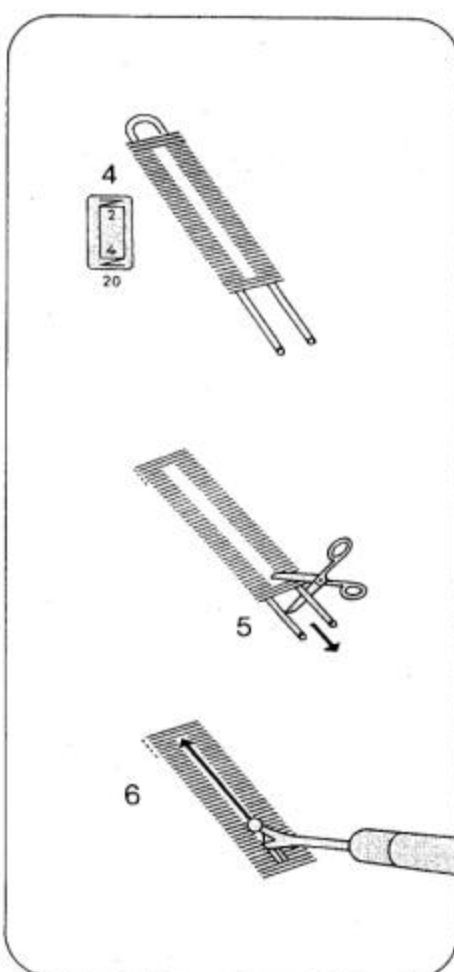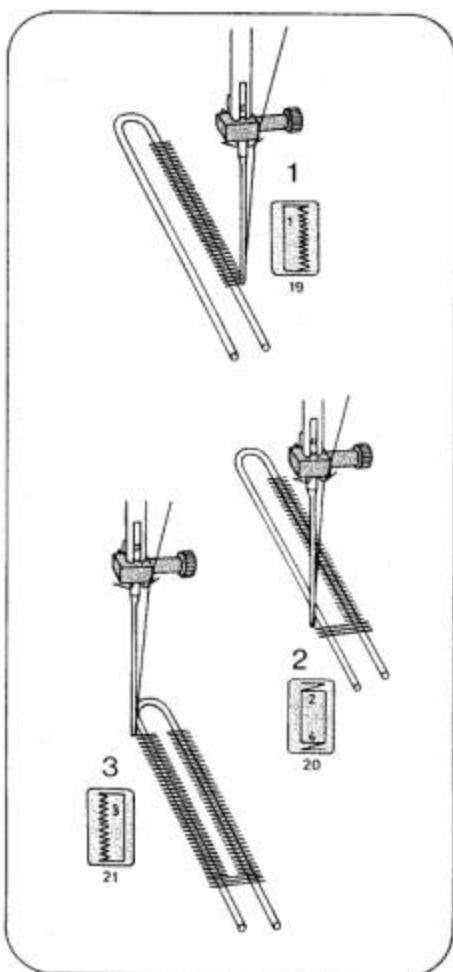

### Sewing feet


- A Normal sewing foot
- B Clear-view foot
- C Buttonhole foot
- D Hemmer foot

- E Zipper foot
- F Blindstitch foot
- G Darning foot
- H Guide


www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
www.lockmachine.info




A  
98-694 563-00

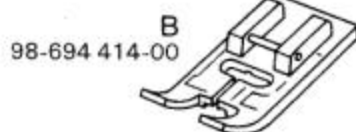

B  
98-694 414-00

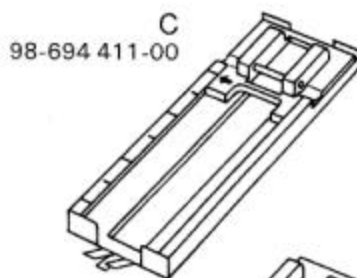


C  
98-694 411-00

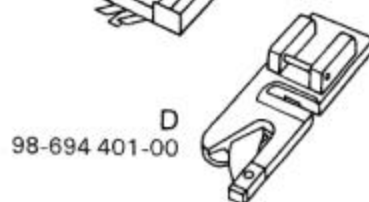


D  
98-694 401-00



E  
98-694 404-00

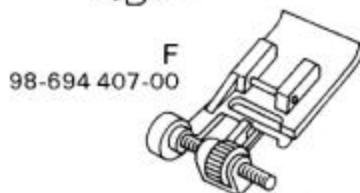

F  
98-694 407-00

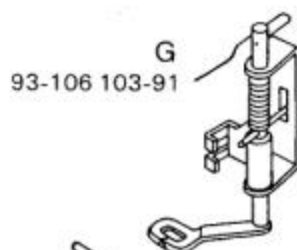

G  
93-106 103-91



H  
98-802 422-00







### Changing the light bulb

Push the light bulb up, turn it toward A and pull it out. Insert the new bulb so that its pins slide in slots C. Push it up and turn it toward B.

### Cleaning and oiling

Tilt needle plate 38 up at the back (A) and take it out (B). Clean the machine feed and the parts in the vicinity of the sewing hook with a soft brush. Do not oil the machine because it is maintenance-free. All you have to do is put a drop of oil into the hook race-way now and then.

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)

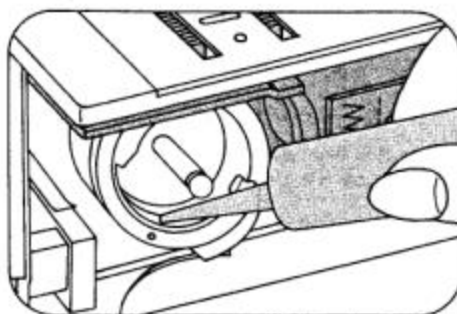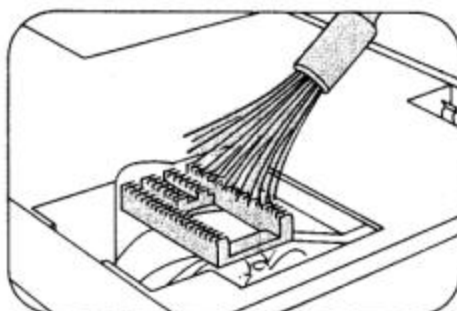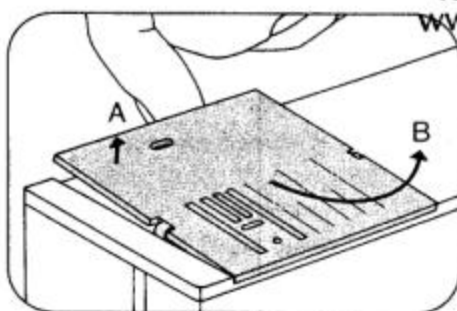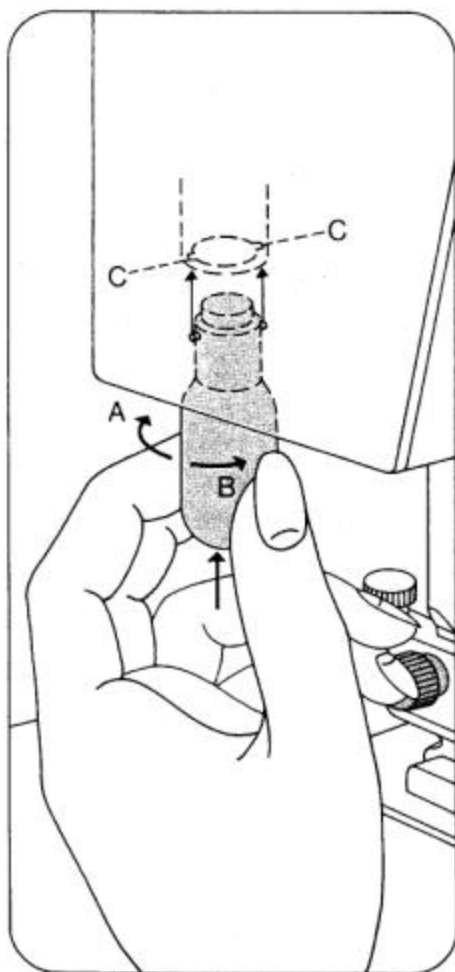

## Trouble shooting

www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
www.lockmachine.info

### Cause:

### Remedy:

#### 1. Machine skips stitches

Needle not inserted correctly.

Push needle up as far as it will go, its flat shank side facing toward the back.

Wrong needle used.

Insert system 130/705 H needle.

Needle bent or blunt.

Insert new needle.

Machine threaded improperly.

Check threading.

Needle too thin for thread used.

Select needle according to Needle and Thread Chart.

#### 2. Needle thread breaks

For any of the above reasons.

See par. 1 above.

Thread tension too strong.

Regulate thread tensions.

Poor-quality or knotty thread used, or thread that has become too dry by excessive storage.

Use only good-quality thread.

#### 3. Needle breaks

Needle not pushed up as far as it will go.

Insert new needle and push it up as far as it will go.

Needle bent.

Insert new needle.

Needle too thin or too thick.

See Needle and Thread Chart.

Needle bent and strikes needle plate because work is pushed or pulled.

Let machine feed the work alone. Only guide the material lightly.

Bobbin case improperly inserted.

When inserting the bobbin case, press against it until it snaps into place.

www.matri.nl  
**Matri Naaimachine**  
*specialisten sinds 1929*  
 Lange Bisschopsstraat 9  
 7411 KG Deventer  
 Tel.: 0570 - 61 63 83  
 www.lockmachine.info

Cause:

Remedy:

#### 4. Seam is not uniform

Tension out of adjustment.

Thread too thick, knotty or hard.

Bobbin thread wound unevenly.

Check upper and lower tensions.

Use first-class thread only.

During bobbin winding, do not hold thread in hand, but pass it through the bobbin tension stud.

Kinks appear on top and bottom of material.

Thread machine properly and check both tensions.

#### 5. Machine feeds irregularly or not at all

Lint has accumulated between tooth rows of feed dog.

Remove needle plate and clean out lint.

Feed dog dropped. (Reverse-feed control is at left.)

Flick reverse-feed control to the right.

#### 6. Machine runs with difficulty

Thread ends in hook raceway.

Remove thread ends and put a drop of oil into hook raceway.

Notes

[www.matri.nl](http://www.matri.nl)  
**Matri Naaimachine**  
*specialisten sinds 1929*  
Lange Bisschopsstraat 9  
7411 KG Deventer  
Tel.: 0570 - 61 63 83  
[www.lockmachine.info](http://www.lockmachine.info)